



PRODUCT DATASHEET

SPC

CABLE CUTTER




How to use the cutter

1 >



Slide the CaP on to the coaxial cable.

2 >

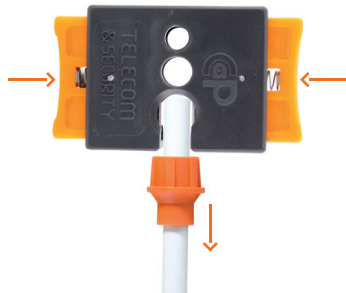


Insert the coaxial cable into the side slot of the stripping tool (SPC) about 10 mm (3/8"); gently squeeze the blades while pulling the cable out to slit both sides of the jacket.

3 >



Expose the dielectric by pushing backwards the jacket and the braid.

4 >

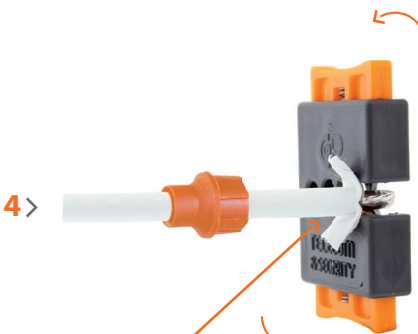

Insert the cable in the round hole until the dielectric just peaks on the other side. Rotate the tool $\pm 90^\circ$ while squeezing the blades to cut and remove the dielectric.

5 >



The cable is ready.



For CaP System use only this cutting area

Mechanical Specification

Body Material:	ABS
Blade Material:	Carbon Steel 67
Weight:	56 g

